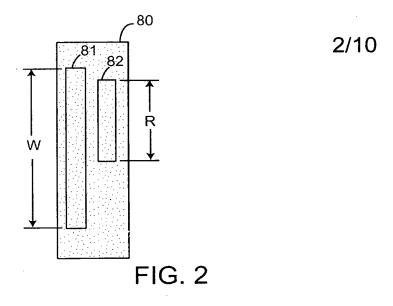
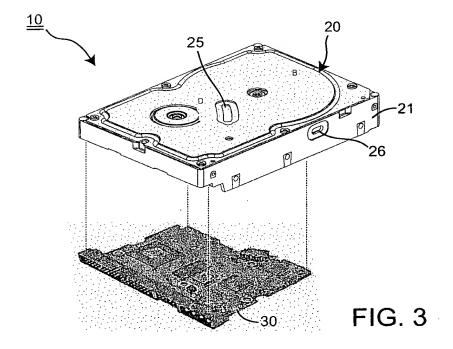
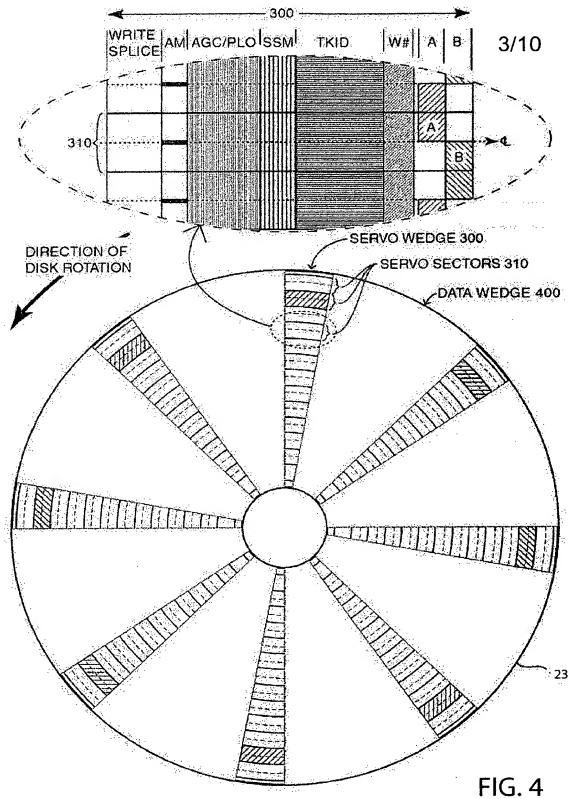


SCANNED,# \B







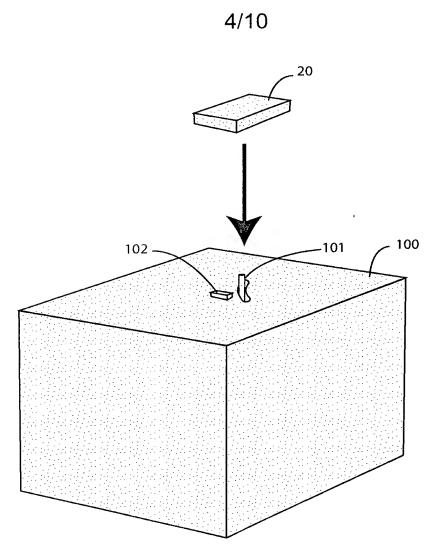


FIG.5




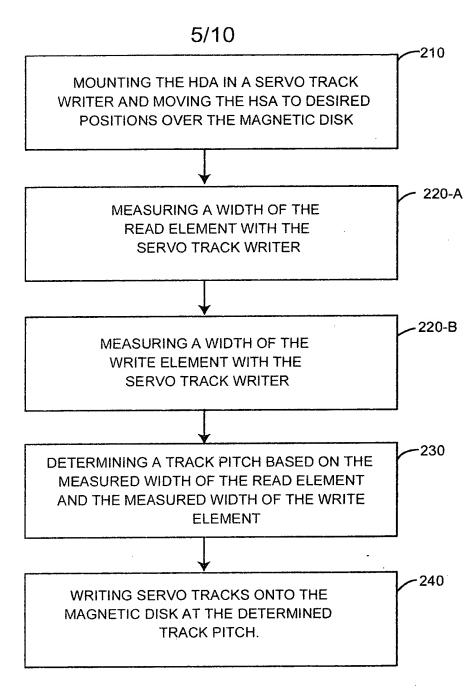


FIG. 6

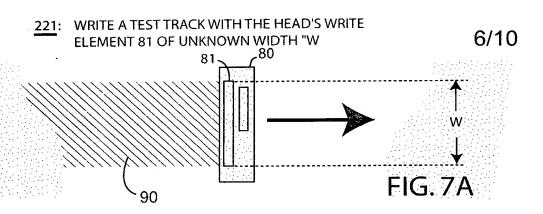


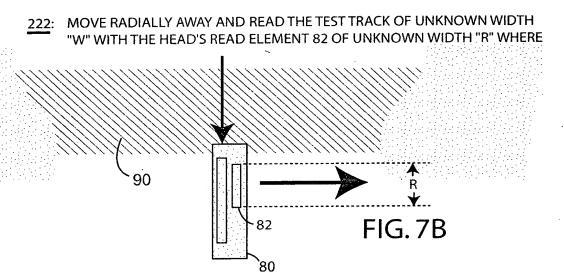

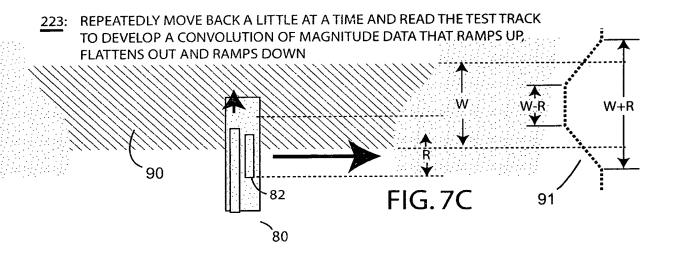


7/10


224: CALCULATE THE WIDTHS R AND W USING THE STW'S COUNT VALUES

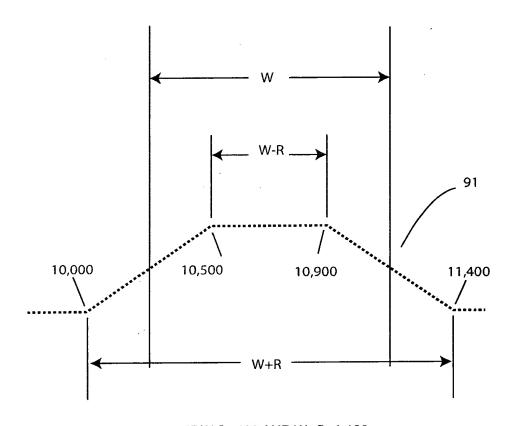



IF W-R=400 AND W+R=1,400 THEN W=900 AND R=500

FIG. 7D



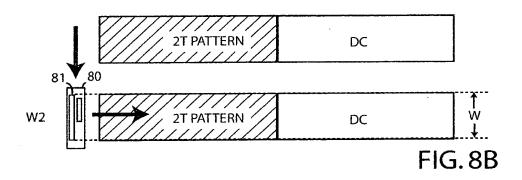

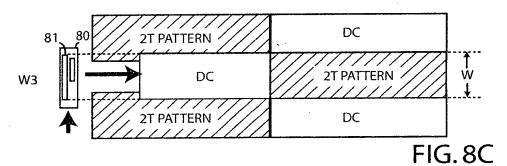

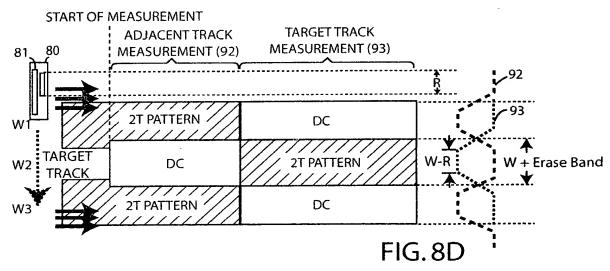

9/10


WIDE READER NOMINAL READER NARROW READER

LOW TPI	LOW TPI	LOWTPI
LOW TPI	NOMINAL TPI	HIGH TPI
LOW TPI	HIGH TPI	HIGH TPI
WIDE	NOMINAL	NARROW

WIDE N

NOMINA WRITER NARROW WRITER

FIG.9

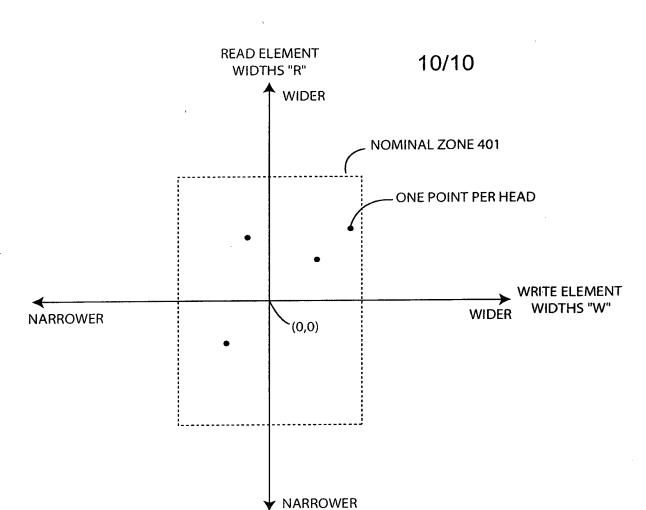

NARROWER TRACK PITCH IMPLEMENTD

NOMINAL TRACK PITCH IMPLEMENTED

WIDER TRACK PITCH IMPLEMENTED

FIG. 10